SAMSUNG

YP-780

DIGITAL AUDIO PLAYER

yepp™

- Featuring an Encoding Function
- Supports 3D surround sound
- Removable Storage Device
- Touchpad operation
- MP3 & WMA Playback
- FM Reception
- Voice Recording Function
- 20-Hour Continuous Play

AH68-01510B (Rev 0.0)

Contents

Preparations

Safety Instructions 4
Features 6
Components 9
Location of Controls (yepp) 10

Connection to Computer

Connecting yepp to PC 12
Manual Installation of USB Driver 16
Using the removable storage 20
● Downloading/Uploading files 20
● Disconnecting the USB cable 21
Installing yepp Studio 22
● To View Help on yepp Studio 24
Installing yepp WAV Converter 26
Convert WAV File 28

Basic Usage

Playing Music and Turning Off the Device 30
Adjusting the Volume/Hold Function 31
Changing Modes 32
Recording Voice 33
Encoding MP3s 34
Searching for Music/Voice Files 36
Listening to FM Radio 38
Encoding From FM Radio 40

Additional Usage

Loop Repeating 41
Setting SRS 42
MENU Mode 43
Selecting the Play Mode 44
Selecting the EQ Mode 45
Selecting the Play Folder 46
Managing Files 47
● Deleting 47
● Formatting 48
Setting the Advanced Functions 49
DISPLAY 50
● INFORMATION / BACK LIGHT 50
● CONTRAST / SCROLL SPEED / LANGUAGE 51
SOUND CONTROL 52
● WOW LEVEL / OPTIMIZATION 52
● ENCODE BIT RATE 53
● BEEP ON/OFF 53
● DEFAULT VOLUME 53
TIME CONTROL 54
● INTRO TIME / POWER OFF TIME / SLEEP TIME 54
Setting the FM Frequency Unit 55

Appendix

MENU Table 56

Customer Support

Troubleshooting 58
Specifications 60

ENG

Safety Instructions

Read and understand all the instructions to avoid injury to yourself and damage to the equipment.

Do not expose to extreme temperatures (above 95°F or below 23°F). Do not expose to moisture.	Do not apply excessive pressure to the device.	Do not let any foreign matter spill into the device.
Do not place heavy objects on top of the device.	Do not expose to chemicals such as benzene and thinners.	Remove batteries when the device is left unused for a long period of time.
Do not expose to direct sunlight or heat sources.	Do not store in dusty areas.	Do not try to disassemble and repair the device yourself.

✻ Please be aware that we disclaim all responsibility for damages from loss of saved or recorded data due to breakdown, repair or other causes.

Earphones

Follow Traffic Safety Instructions

- Do not use the earphones while driving an automobile or riding a bicycle. It's not only dangerous, but also against the law.
- It may cause an accident if you turn up the volume of the earphones while walking down the street, especially crossing at intersections.

Protect your ears

- Do not turn up the volume too high. Doctors warn against prolonged exposure to high volume.
- Stop using the device or turn the volume down if you have ringing in your ears.

Ambient operating conditions

- Ambient temperature : 5°C ~ 35°C (41°F ~ 95°F)
  Humidity : 10 ~ 75%

Environmental Information

- Follow local guidelines for waste disposal when discarding packages, batteries, and old electronic appliances.
- Yepp packages use cardboard, polyethylene etc., and do not use any unnecessary materials.

Featuring an Encoding Function

You can make a MP3 file out of an source using the ENC jack on the main unit.
You can also convert an FM radio program into an MP3 file in real time.

Supports 3D surround sound

- You can feel the deep base and 3D surround sound.
- SRS(●) WOW is a trademark of SRS Labs, Inc.
  WOW technology is incorporated under license from SRS labs, Inc.

Removable Storage Device

- You can easily copy and paste files to the yepp player using Windows Explorer.

DIGITAL SOUND yepp

Touchpad operation

You can easily operate the functions you want by using the touchpad.

MP3 & WMA Playback

MP3 is an MPEG1 Layer3 audio format.
WMA is a Microsoft Windows Media audio format.

FM Reception

Listening to an FM program is made easy with Auto Search and Frequency Memory functions.

DIGITAL SOUND yepp

Voice Recording Function

You can do a Voice Recording with high quality and use it for a conference.

Sound

You can adjust equalizer manually.

20-Hour Continuous Play

This unit uses two AAA/LR03 alkaline battery. Operation can last up to 20 hours.
Actual playing time may vary according to the type and capacity of the battery.

Components

Player

Earphones

USB Cable



User manual


Battery
(AAA/LR03 type)

Neck Strap

Carrying case

Line Cable

Installation CD

Model	YP-780 H	YP-780 V	YP-780 X	YP-780 Z
Built-in memory	128MB	256MB	512MB	1GB

- The capacity of the useable built-in memory is less than indicated as the internal firmware uses a part of the memory as well.
- Design of accessories is subject to change for improvement without notice.

Notice :

- Do not mix rechargeable and nonrechargeable batteries, alkaline or Ni-MH types of batteries, or different grades or brands of batteries.

Location of Controls (yepp)

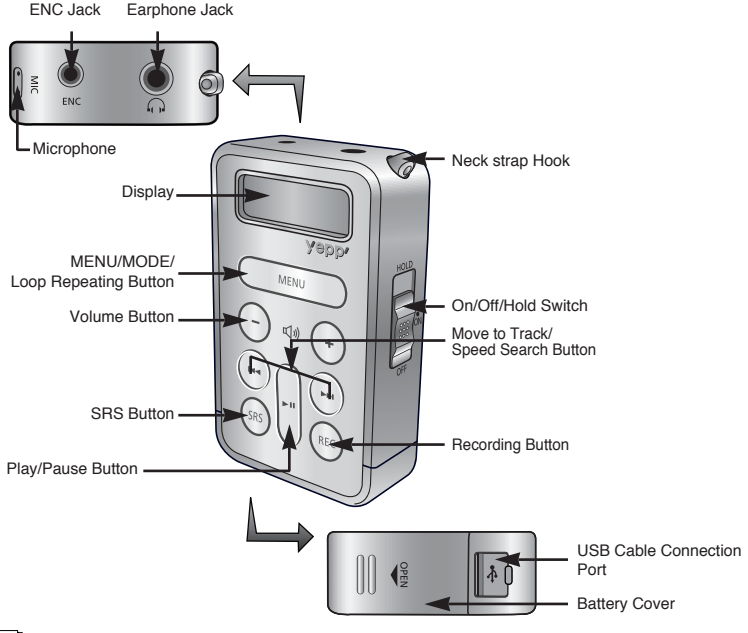

Display

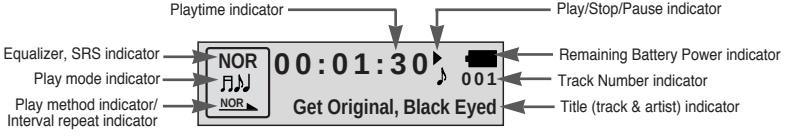

Inserting a Battery

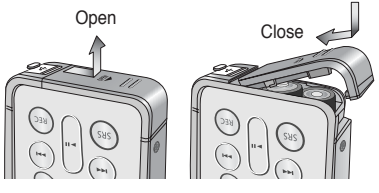

1 Slide the cover in the direction of the arrow to open.

2 Insert a battery to the right poles + , – and push-close the cover in the direction the arrow as indicated.

Note :

- Do not place heavy objects on the cover.

Connecting yepp to PC

ENG

System Requirements.

The PC system must meet the following specifications:

- Pentium 133MHz or greater
- Windows 98 SE/ME/2000/XP
- 40MB of available hard disk space
- CD-ROM drive (double speed or greater)
- USB port (1.1) supported
- VGA graphic
- DirectX 8.0 or above

Before connecting yepp to PC, make sure to install USB driver. If “Add New Hardware Wizard” appears, press the [Cancel] button and install USB driver.

Installing software

1 Insert the Installation CD into CD-ROM drive.
The picture shown below appears.
Select [yepp USB Driver].

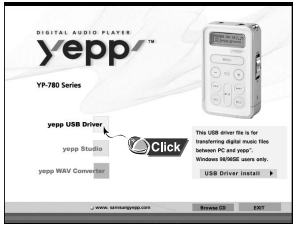

2 Choose the language you wish to use.

3 Click [Next] in the series of windows that appear.

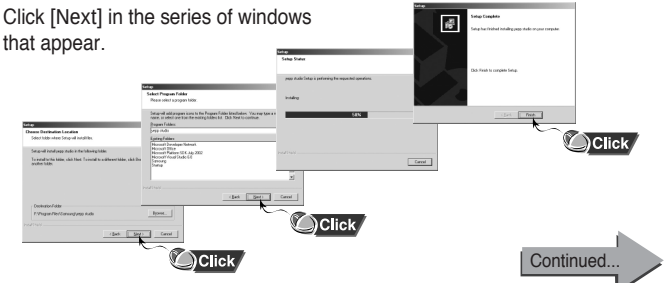

Continued...

Connecting yepp to PC with USB cable

4 Plug one end of the USB cable into the USB port on the back of the PC.

5 Connect the opposite end of the USB cable to the USB cable port on the bottom of the yepp.

- If you disconnect the USB cable from your PC while implementing a command or initializing during USB driver installation, your PC may not function correctly.
  The power of Yepp must be turned on to connect to PC with portable disc.
  If the switch on the right side of Yepp is off, please turn it "On".

6 USB driver is installed with a message saying that it is searching for a new device. You may not see the display screen during installation.
Go to the device manager to check that installation has been successfully completed.

7 Upon installation of the USB driver "SAMSUNG YP-780" will appear in the [System Properties] → [Device Manager].

How to check USB driver

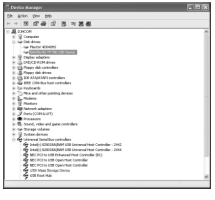

Windows 98/ME:
Control Panel → System → Device Manager →
Disk drives → SAMSUNG YP-780
Windows 2000:
Control Panel → System → Hardware →
Device Manager → Disk drives →
SAMSUNG YP-780 USB Device
Windows XP:
Control Panel → System → Hardware →
Device Manager → Disk drives → SAMSUNG YP-780 USB Device

8 When USB driver is not Installed automatically, refer to next page.

Manual Installation of USB Driver

Go to "Downloading/Uploading files" if the USB driver is in place.
Follow these steps if the USB driver is not in place :

ENG

1 Check the device manager.
Windows 98,ME:
Control Panel → System → Device Manager
Windows 2000:
Control Panel → System → Hardware → Device Manager
Windows XP:
Control Panel → System → Hardware → Device Manager

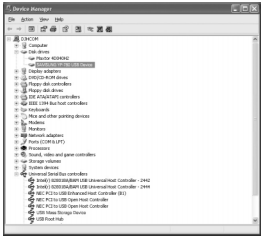

2 Check if there is a device listed with an exclamation point or a question mark (displayed as unknown device or USB device).

3 Double click on the device listed with an exclamation point or a question mark.

4 After selecting the driver, click on [Update Driver].

5 Select a compatible driver, click on [Next] to finish.

Continued...

ENG

In Windows 98

Click [Next] button in the series of windows that appear.

Add New Hardware Wizard
This wizard searches for new drivers for:
USB Device
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel
Click

Add New Hardware Wizard
What do you want Windows to do?
Search for the best driver for your device. (Recommended).
Display a list of all the drivers in a specific location, so you can select the driver you want.
< Back
Next >
Cancel
Click

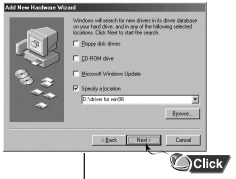
Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
Floppy disk drives
CD-ROM drive
Microsoft Windows Update
Specify a location:
D:\driver for win98
Browse...
< Back
Next >
Cancel
Click

Select [Specify a location] and then select
[CD-ROM]/driver for win98.

Add New Hardware Wizard
Windows driver file search for the device:
SAMSUNG YP-780
Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue.
Location of driver:
D:\DRIVER\SYSTEM\PST\DRUNF
< Back
Next >
Cancel
Click

● You must reboot your computer to complete the installation.

Downloading/Uploading files

1 Connect the yepp to your PC and turn it on.

2 Open Windows Explorer on PC.

3 Select the file to save and drag-and-drop it into the removable disk icon.
(In numerical, alphabetical order)

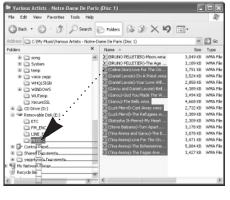

Notice

- Music File can be played only when it is downloaded in the MUSIC folder or the folder right below of MUSIC folder.
- The order of music files is not relative to the replay order when you select a Removable Disk in Windows Explorer.
- While either DOWNLOAD or UPLOAD on the LCD of Yepp is turned on, do not remove UBS cable. Your PC might malfunction.
  If "READY" will be displayed on the LCD of Yepp, it means that transmission is completed. Then you can remove UBS cable.

Disconnecting the USB cable

After completing the file transmission, you must disconnect the cable in the following way:

1 Double-click on the green arrow in the taskbar on the bottom right of the window.

2 When the **[Hardware device stopped]** message appears, press the **[OK]** button and disconnect the USB cable.

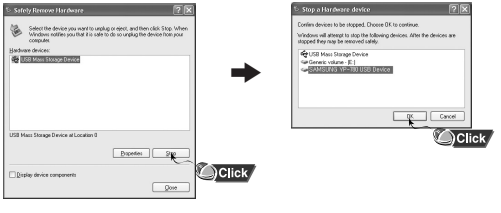

Note

- On search engine of Windows98, put the mouse on the portable drive and click the right mouse button to execute "Eject".
  (When "READY" is displayed on the LCD of Yepp after executing "Eject", remove UBS cable.)

ENG

Installing yepp Studio

ENG

1 Insert the Installation CD into CD-ROM drive.
Select **[yepp Studio]**.

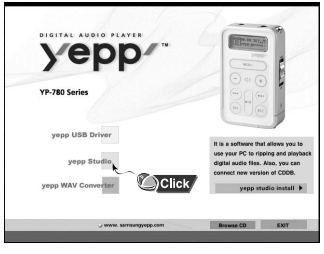
DIGITAL AUDIO PLAYER
yepp
YP-780 Series
yepp USB Driver
yepp Studio
yepp WAV Converter
Click
It is a software that allows you to use your PC to ripping and playback digital audio files. Also, you can connect new version of CDDB.
yepp studio install
www.samsungyepp.com
Browse CD
EXIT

2 Select language

3 Click **[Next]** in the series of windows that appear.

- Please refer to Help for more information on how to use yepp Studio.

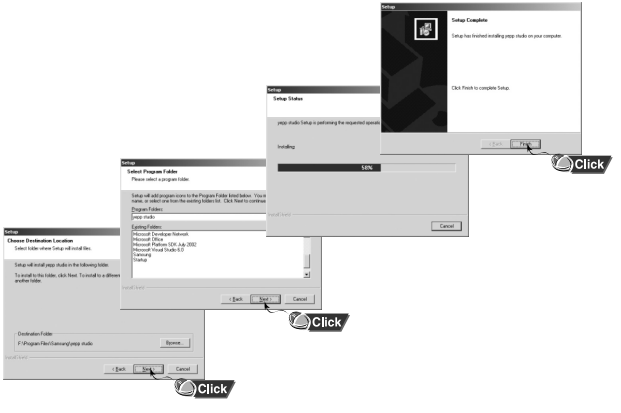

To View Help on yepp Studio

Run yepp Studio and press **F1**.

- Help will appear.
  Move the arrow to the top of yepp Studio and right click on the mouse.
  The following selection window will appear.
- Click on Help and the Help window will appear.

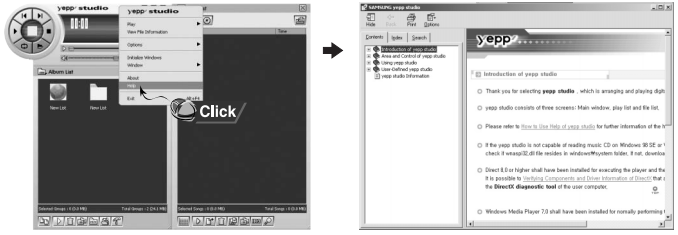

Note :

- Music recognition technology and related data are provided by Gracenote and Gracenote CDDB® Music Recognition Service^{SM}.
- CDDB is a registered trademark of Gracenote. The Gracenote logo and logotype, the Gracenote CDDB logo and logotype, and the "Powered by Gracenote CDDB" logo are trademarks of Gracenote. Music Recognition Service and MRS are service marks of Gracenote.
- If a firewall is installed on the PC, it may not be possible to import CDDB information.

Installing yepp WAV Converter

ENG

1 Insert the Installation CD into CD-ROM drive.
Select **[yepp WAV Converter].**

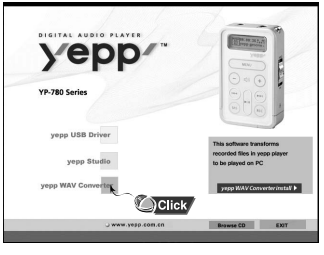

2 Select language

3 Click **[Next]** in the series of windows that appear.

Convert WAV File

● Press [yepp WAV Converter] in the Desktop to display WAV Converter window.

To open the Voice file you want to convert
To convert the Voice file to the WAV file.
To delete the file opened in WAV Converter window
To check the version information
To close the WAV Converter

To Convert Voice File to WAV File

1 When the WAV Converter window appears, press the **[Open]** button to select the Voice file you want.

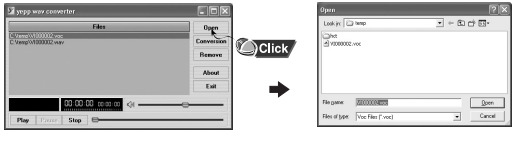

2 When the selected file appears, press the **[Convert]** button to select the folder for saving.

● The selected file will be converted to WAV file and saved in the designated folder.

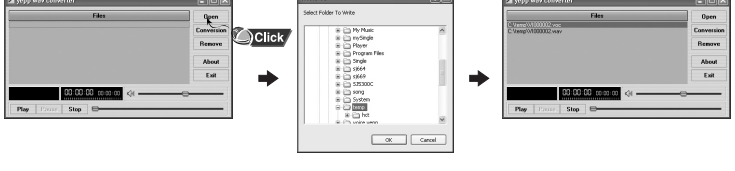

ENG

To Play File

1 When the WAV Converter window appears, press the **[Open]** button to select the Voice file you want.

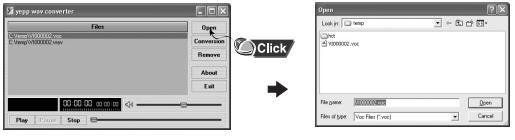

2 When the selected file appears, press the [Play] button.

● Press the [Pause] button to pause or [Stop] button to stop playing.

Playing Music and Turning Off the Device

First insert batteries and connect the earphone correctly.

Playing Music
(Power On)

Turn on the power by pushing up the power switch on the side of the device.

- Music and voice files can be played.

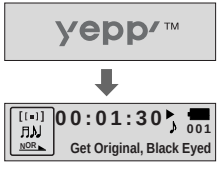

Pausing Music
(Power Off)

Pause playback by pressing the ▸II button.

- Turn off the power by pushing down the power switch on the side of the device.

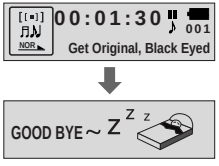

Note :

- WMA files can be played only as music files with a compression rate of 64Kbps-192Kbps that can be created in Windows Media Player (Version 8.0).
- The power off time can be set in the menu.

Adjusting the Volume/Hold Function

Adjusting the Volume

Press the −, + buttons to adjust the volume.



Note

- The volume can be adjusted in increments between 0 and 40.
- Press the −, + buttons once to adjust the volume by one step.
  Press and hold the −, + buttons to increase or decrease the volume in greater increments.

HOLD Function

Under Hold mode, buttons will not work.

Slide the switch on the player in the direction of the arrow.

- When a button is pressed, " HOLD!" message will appear on the display.

Changing Modes

1 Press the MENU button briefly while the player is stopped.

2 Move to the mode you want by using the −, + buttons, and then press the MENU button.

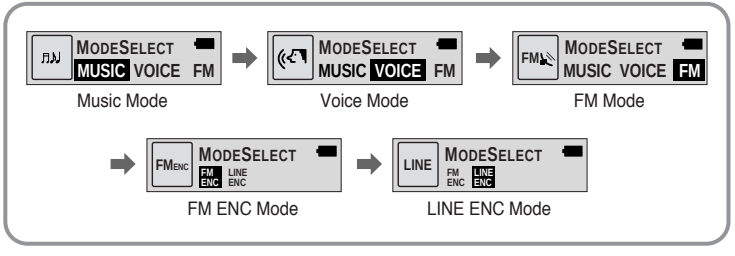

Note :

- You will exit from the Mode Switching function if no action is taken for 5 seconds or if another button is pressed during mode switching.

Recording Voice

1 Press the REC button to start vioce recoding while the player is stopped.

2 If the REC button is pressed again, the recording is stopped and the voice file is saved.

- If the ▶II button is pressed, the recording is paused and if the ▶II button is pressed again, the recording resumes.



Note :

- Recording is performed in order (VI000001, VI000002, etc.) and files are saved in the VOC format after recording.
- If the Memory is full, voice recording is stopped automatically.
- During vioce recording, there is no beeping sound and the button lights and backlight do not illuminate.
- Voice Recording does not work in FM Mode or when the Line cable is connected.

Encoding MP3s

ENG

1 Connect the Audio Output port on the external audio source (or the Line Out port) to the ENC port on the device with the Line in cable.

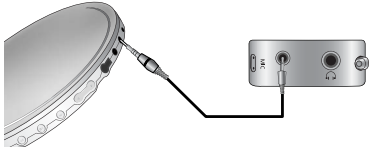

2 If the REC button is pressed, MP3 encoding begins.

- If the ▶II button is pressed, encoding is paused and if the ▶II button is pressed again, the encoding resumes.

3 If the REC button is pressed during encoding, the encoding stops and an encoding file is created.

- Encoding is performed in order (ENC000001, ENC000002, etc.) and files are saved in the MP3 format after encoding.

Note :

- The bit rate can be set to 64Kbps, 96Kbps and 128Kbps.
- During encoding, there is no beeping sound and the button lights and backlight do not illuminate.

Notice :

- Do not disconnect the Line cable during Encoding.
- If the battery is not charged enough, encoding will not be done.
- Adjust the volume of the external audio source to a suitable level and encode it. If the volume level is extremely high, the sound quality may not be good.

Searching for Music/Voice Files

ENG

Note :

- VBR(Variable Bit Rate) file: MP3 file whose compression rate changes when played.
- With VBR files, pressing the ⏮ button within 5 seconds. From the start of the track may not result in the previous track playing.
- This player may not play back MPEG1 LAYER1 files.

To search for specific parts during play :

- A desired part can be searched for by pressing and holding down the ⏮, ⏭ buttons during play.

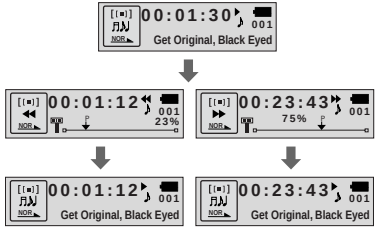

To change tracks during play:

- If the ⏭ button is pressed during play, the next track is played.
- If the ⏮ button is pressed before five seconds have passed since starting to play a track, the previous track is played and if the ⏮ is pressed after five seconds, the current track is replayed from the beginning.

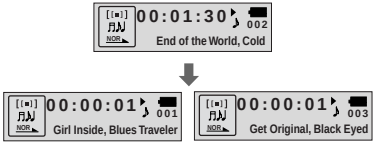

To change tracks when stopped:

- If the ⏮, ⏭ buttons are pressed when stopped, the yepp moves to the previous or next track, respectively.

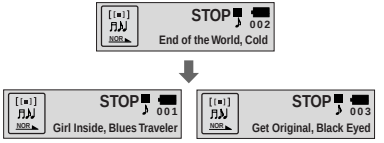

Listening to FM Radio

While the player is stopped, select FM Mode by using the MENU button.

Manual Search for a Frequency

- Press the ⏮, ⏭ buttons to search manually for the desired frequency.



Automatic Search for a Frequency

- Press and hold the ⏮, ⏭ buttons in order to search for and stop at frequencies for which there is reception.



Manual Storage of a Frequency

- After searching manually for a desired frequency, press the SRS button to select the channel in which to save the frequency.
- When the CH channel flashes, press the ▶II button to save the selected frequency.



Note :

- To exit from FM Mode, press the MENU button.

Automatic Storage of a Frequency

- Press and hold the SRS button while in FM Mode.
- Frequencies within the range of 87.5MHz to 108MHz are automatically selected and stored.
- Frequencies are automatically stored, starting from 1.



ENG

Searching Stored Frequencies

1 Press and hold the MENU button in FM mode.

2 Press the MENU button after using the −, + buttons to move to the desired channel.

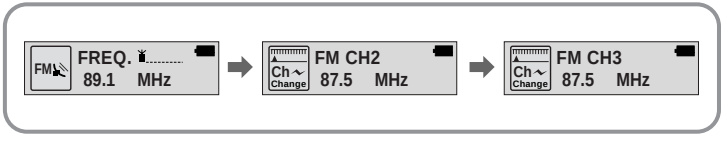

Note :

- You can store up to 20 frequencies.
- You can replace an existing frequency with a new one but you cannot delete a stored frequency.

Encoding From FM Radio

1 Press the REC button during FM reception.
- Encoding of the currently transmitted FM broadcast begins.

2 Press the REC button again.
- A file is created and the encoding stops.
- Files are saved in order of F000001, F000002...and stop automatically when the memory is full.

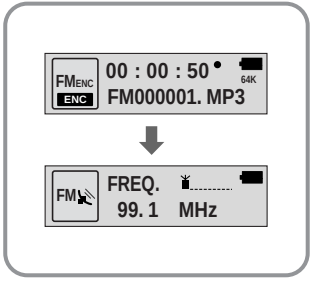

Note :
- During encoding, there is no beeping sound and the button lights and back light do not illuminate.
- Encoded file will become 64Kbps file after it is encoded to FM.

Loop Repeating

Starting Point

While playing music files, press the MENU button briefly at the beginning of the loop you want to set.

A appears in the display.

Ending Point

Press the MENU button briefly again to set the end of the loop.

A B appears in the display.
The loop is played repeatedly.

Note :
- Press the MENU button briefly to cancel the loop.
- Loop Repeat is automatically released if you Speed Search with the ⏮, ⏭ buttons.

Setting SRS

Press the SRS button in Music mode to select the desired SRS mode.

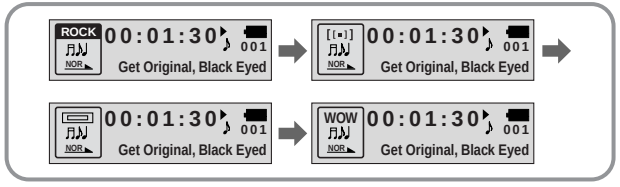

- **SRS ( )** : You will hear 3D Stereo sound.
- **TRUBASS ( )** : This is a bass boost feature that adds fullness to the sound.
- **WOW** : This feature allows you to enjoy the SRS and Trubass features simultaneously.

Note :

- Please adjust the volume to a suitable level, as the volume may increase in the SRS setting.
- This unit supports sampling frequencies of 32KHz, 44.1KHz or 48KHz.
- You can set SRS functions only in Music Mode.
- When not in folder playback mode, press and hold SRS to skip the next 10 songs.

  Example) To move to Track 42 while Track 15 is being played, press and hold the SRS button three times and then press the ⏭ button twice.

  15 ➡ 20 ➡ 30 ➡ 40 ➡ 41 ➡ 42

MENU Mode

To switch to Menu Mode, press and hold the MENU button while in Music/Voice Mode.
After moving with the −, + buttons, press the MENU button to select the desired menu.
Menu mode is cancelled if the ⏯ button is pressed.

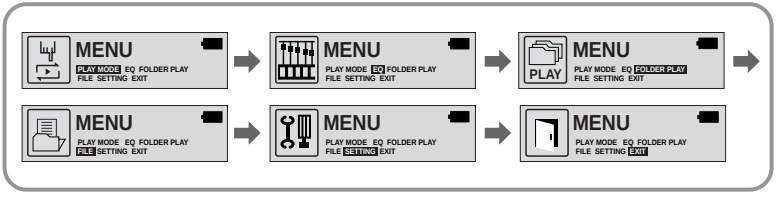

- **PLAY MODE** : To select track repeating mode.
- **EQ** : To select the desired music tones.
- **FOLDER PLAY** : To play only the music in the selected folder.
- **FILE** : To delete or format music files.
- **SETTING** : To change the advanced yepp functions.
- **EXIT** : To exit MENU.

Note :

- In MENU mode, no input for 30 seconds will cancel the MENU mode.

ENG

Selecting the Play mode

1 Select PLAY MODE in the MENU. (refer to “MENU Mode”)

2 Use the −, + buttons to move to the mode you want and press the MENU button to select.

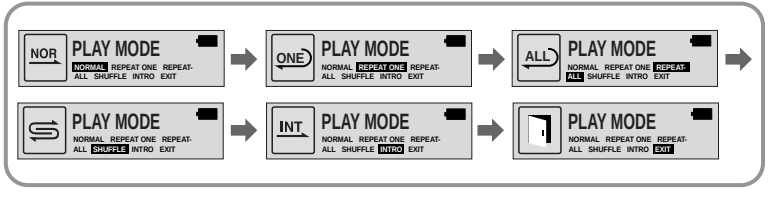

- NORMAL : To play all the tracks in order one time.
- REPEAT ONE : To repeat one track.
- REPEAT ALL : To repeat all tracks.
- SHUFFLE : To play tracks at random.
- INTRO : To play the first 10 seconds of each track.
- EXIT : To move to the upper menu.

Selecting the EQ mode

1 Select EQUALIZER in the MENU. (refer to “MENU Mode”)

2 Use the −, + buttons to move to the setting you want (out of the 4 settings) and press the MENU button to select.

- Select the DBB Mode if you want to fine-tune the sound.

3 If you want to manually adjust the equalizer, select User and Bass/Treble.

- Bass and treble can each be adjusted from 0 to 10.

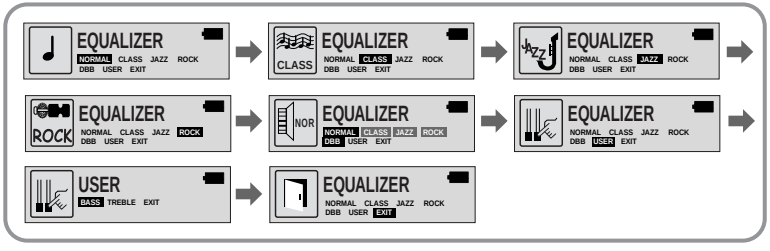

Note :

- DBB is for Dynamic Bass Booster, which enhances bass response.

Selecting the Play Folder

1 Select Folder Play in the MENU. (refer to “MENU Mode”)

- F : This signifies the root folder; the files in the folder are played if the Menu button is pressed.
- : This signifies the sub-folders of the Music folder; only the files in the selected sub-folder are played when the Menu button is pressed.

2 Use the −, + buttons to move to the desired folder and press the MENU button to select.

- Only the files in the selected folder are played.

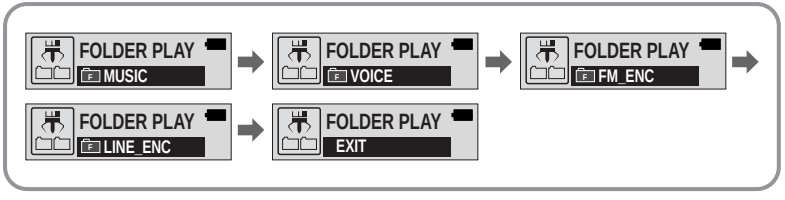

Note :

- You can only create sub-folders in the Music folder and folder creation is only possible in yepp Studio.
- You can move to the next folder by pressing and holding down the SRS button when playing a folder.

Managing Files

Deleting

1 Select FILE in the MENU. (refer to “MENU Mode”)

2 Select DELETE and then move to the file you wish to delete.

- If GO UP is selected, files in other folders can also be selected.

3 Select YES in the Delete Confirm Window after pressing the MENU button.

- The selected file is deleted.

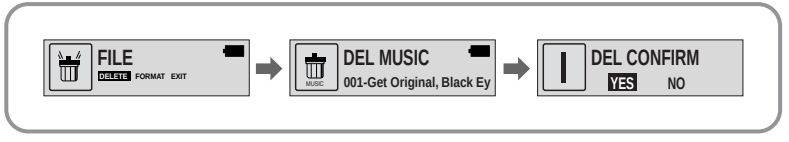

Continued...

Formatting

1 Select FILE in the MENU. (refer to “MENU Mode”)

2 Select FORMAT.

- Formatting is performed if CONFIRM is selected.

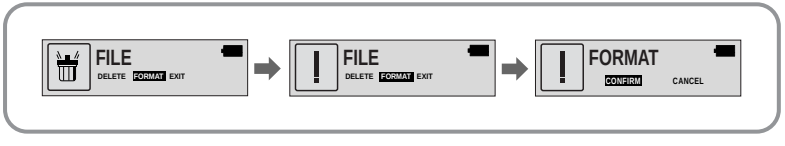

Note :

- All files are deleted if yepp is fomatted.

1 Select SETTING in the MENU. (refer to “MENU Mode”)

2 Use the (−), (+) buttons to move to the function you want to change and select the function by using the MENU button.

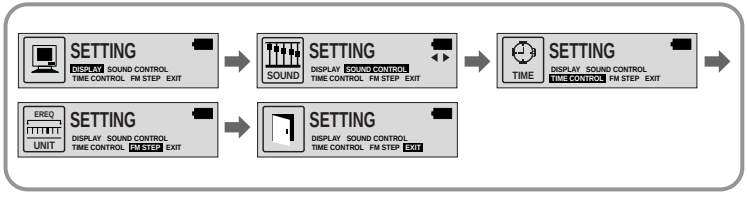

Continued...

ENG

Select DISPLAY in the MENU.

INFORMATION

- Use the −, + buttons to select the music mode and select the content to be displayed at the top of the Screen Display Window.
- Play time: Displays the current play time
- Remain time: Displays the remaining play time
- Free memory: Displays the remaining memory
- Bit rate: Displays the wave bit rate that is being played

BACK LIGHT

- Use the −, + buttons to set the Backlight “ON” time.
- The setting range of Backlight-On Time is 0 to 30 seconds.
- When set to Always On, the backlight stays on continuously.

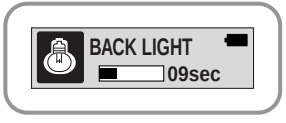

Note :

- The backlight does not illuminate when the residual battery level is insufficient.

ENG

CONTRAST

- Use the −, + buttons to set the Contrast.
- The setting range of the contrast, which adjusts the brightness of the screen, is 0 to 20.

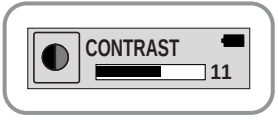

SCROLL SPEED

- Use the −, + buttons to set the Scroll Speed.
- The setting range of the scroll speed, which adjusts the speed of the track title flow, is 0 to 10.

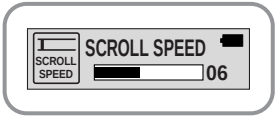

LANGUAGE

- Use −, + button to select the desired file language among 10 different languages
- File information will be displayed in selected language.



SOUND CONTROL

Select SOUND CONTROL in the MENU.

WOW LEVEL

- The levels of SRS and TRUBASS can be adjusted.
- Use the (−), (+) buttons to select the level you want.

*The level for SRS and TRUBASS can each be set within the range of 0 to 10.

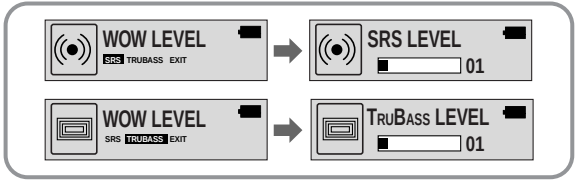

OPTIMIZATION

- Optimizes the SRS function to the device that's connected.
- Set the desired device to earphone, headphone, speaker or carpack by using the (−), (+) buttons.

ENG

ENCODE BIT RATE

- Use the (−), (+) buttons to sel the desired MP3 encoding bit rate.
- You can set the desired bit rate to 64kbps, 96kbps or 128kbps when doing MP3 encoding.

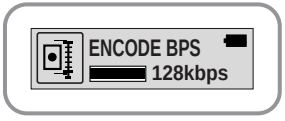

BEEP ON/OFF

- Use the (−), (+) buttons to set the BEEP mode.
- BEEP ON: A beep sounds each time a button is pressed.
- BEEP OFF: No beep sounds when a button is pressed.

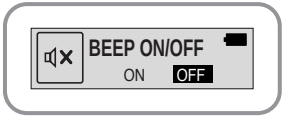

DEFAULT VOLUNE

- Use the (−), (+) buttons to set the DEFAULT VOLUME.
- It is possible to set the default volume to a value between 0 and 40. If the power is turned on again after having adjusted the volume above the default value, music is played at the default volume.
- If the power is turned on again after the volume was set to within the default value, the music is replayed at the previously played volume.

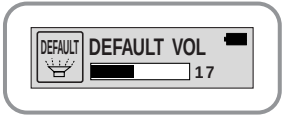

TIME CONTROL

Select TIME CONTROL in the Menu.

INTRO TIME

- Use the (−), (+) buttons to set the INTRO TIME.
- The intro play time can be set from 10 to 50 seconds. The first section of each track is played for the set time.

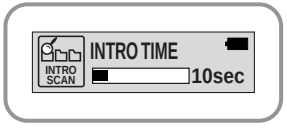

POWER OFF TIME

- Use the (−), (+) buttons to set the POWER OFF TIME.
- The power off time can be set from 3 to 180 seconds. After stopping playback, the power is turned off automatically if no buttons have been pressed during the set time.
- When set to No Power Off, the power does not turn off even when the device is stopped.

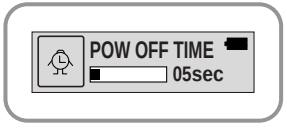

SLEEP TIME

- Use the (−), (+) buttons to set the SLEEP TIME.
- The sleep time can be set from 3 to 180 minutes. The power turns off automatically after the set time has passed.

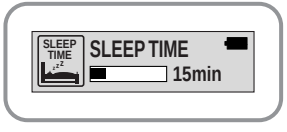

Note :

- When the device is turned off automatically, the power can be turned on again by pushing the power switch down to the Off position and then pushing it back up to the On position.

Setting the FM Frequency Unit

ENG

You can set the unit of frequency movement in FM mode.

1 Select FM STEP in the MENU.

2 Use the (−), (+) buttons to move FM step to 100KHz or 50KHz and press the MENU button to select.

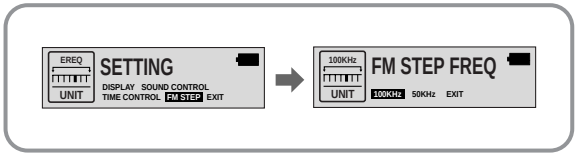

MENU Table

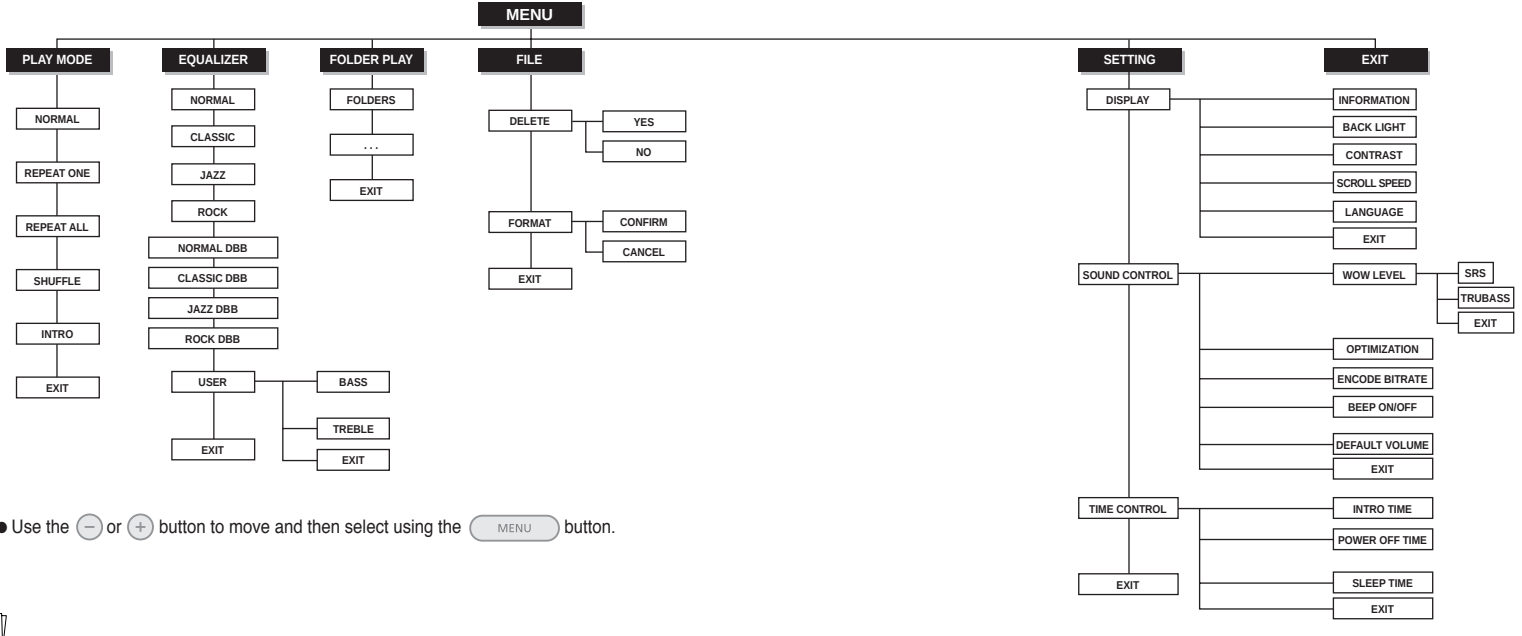

● Use the − or + button to move and then select using the MENU button.

ENG

Troubleshooting

ENG

The software doesn't work

- Refer to the recommended PC specifications.

yepp does not work and the LCD displays nothing.

- Check the battery capacity
- Check to see if the battery is inserted to the right poles −,+

In PLAY mode, music is not played after pressing the ▶II button

- Verify that the device is currently set to Music mode.
- Check to see if MP3 or WMA files are saved in the built-in memory.
- Check to see if the HOLD switch is locked.
- Check if the REC button is on.
- Format with the format function of the main body.

Files cannot be downloaded.

- Check to see if the driver is installed correctly in the computer.
- Check the connection between yepp and computer.
- Check and/or replace the battery, turn on the yepp's power.

Backlight does not work.

- Check the backlight setup.
- When the battery power is low, the backlight will go out.

The buttons do not work.

- Check setting of Hold switch.

yepp keeps being turned off.

- In Stop mode, the power is automatically turned off after ten seconds (changes depending on settings).
- Check to see if there are files saved in it.

Something's wrong with play time displayed during Play mode.

- "VBR SONG" message is displayed while VBR (Variable Bit Rate) file is playing.

LCD window is dark

- Check Contrast

Yepp doesn't work even though the power switch is set to On.

- Try pushing the power switch down to Off and then pushing it back up to On.

Strange characters are displayed on the screen during playback.

- Change the language setting on the menu of the main body.

Specifications

Model	YP-780
Built-in Memory capacity	1GB(YP-780 Z)/512MB(YP-780 X)/256MB(YP-780 V)/128MB(YP-780 H)
Voltage	1.5V x 2 (AAA/LR03 size alkaline battery)
Playing time	lasts up to 20hours (Alkaline battery, MP3 128Kbps, Vol level 30)
Dimensions/Weight	45 x 73 x 17.5mm/45g (without battery)
Case	Plastic/Aluminum
Noise Ratio	80dB with 20KHz LPF
Earphones Jack Output Power	6mW(Max 10mW)/CH (16 Ω)
Output Frequency Range	20Hz~20KHz
Operating Temperature Range	-5 ~ +35°C(23~95°F)
FM Frequency	87.5 ~ 108.0 MHz
FM Signal to Noise Ratio	45dB
FM T.H.D	1%
FM Useable Sensitiivity	10dB
File Support	MPEG1/2/2.5 Layer3(8Kbps ~ 320Kbps, 8KHz ~ 48KHz) WMA (64Kbps ~ 192Kbps, 32KHz, 44.1KHz, 48KHz)

MEMO